

TERMINAL TYPES

KINETIK® AP SERIES BATTERIES

Type	Front	Side	Top
A			
C			
D			
E			
F			
G			
HD			
I			
IT			
J			
K			
L			

M	 Negative	 Positive
N	 Negative	 Positive
O	 Negative	 Positive
P	 Negative	 Positive
Q	 Negative	 Positive
R	 Negative	 Positive
S	 Negative	 Positive
T	 2 Wires	 Red - Positive Blue - Negative
U	 4 Wires	 Red - Positive Green - Negative
V	 4 Wires	 Red - Positive Green - Negative
W	 2 Wires	 Red - Positive Blue - Negative

EPIC ADVENTURES
 REQUIRE EPIC
 BATTERIES

